-SELF FLASHING INSTALLATION-



Locate skylight position. With an open beam ceiling simply drive a 3" nail up through the root at each corner of the proposed skylight opening in a conventional house poeing in a conventional house poeing in a conventional house the healise phrough the root Beat the realise phrough the root Beat the realise phrough the root Beat wires, water or sewage pipes, or air conditions ducts in the way at root or ceiling levels.



Locate the nails protruding through the roof. Remove the roofing material back about 12° all around the skylight area. Cut the hole through the roof decking.



Frame the inside of the roof opening Frame the inside of the roof opening at the top and bottom. If a rafter runs through the opening, cut it back the thickness of your framing material. Additional framing may be necessary if the skylight seams do not align with the rafters.

Before you start to install your Solar Industries, Inc. sky-light, read the instructions completely. Make sure you have all the tools and materials you will need. Check the weather. Allow yourself 2 to 4 hours to complete the installation.

We suggest you use the methods in these instructions; however, there are other methods. Any roofing contractor or building supply center can help you with any of your questions. Solar Industries, Inc. is in no way liable for the installation of our product.

We also suggest you use black plastic roofing mastic such as GAF, Johns-Manville, Henry's or equal.

Locate skylight position. With an open beam ceiling simply drive a 3" nail up through the roof at each corner of the proposed skylight opening. In a conven-tional house go into the affice or crawl space and drive the nais up through the north Be sure them are no electrical weres, words or saveage pipes, or ar conditioning ducts in the way all rood or ceiling levels.



—CURB MOUNT INSTALLATION—

Locate the nails protruding through the roof. Remove the roofing material back about 12" all around the skylight area. Cut the hole through the roof decking.





ply roofing mastic around opening out 1/4" thick. Be sure to cover all





Apply liberal amount of roofing mastic over the edge of the roofing flange. Cut strips of roofing felt wide enough to cover flange and overlap the felt on deck. Put the bottom piece on first, followed by the side pieces, then the top piece.




Apply roofing mastic over the felt strips and replace shingles, com-pletely covering roofing flange. Your installation is now complete. Your self flashing skylight has a built-in drainage system to carry all moisture safely outside.






the opening in the roof. Be sure to use roofing mastic in all joints.

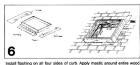

install flashing on all four sides of curb. Apply mastic around entire wood cuts and rod deck. Starting on the downfall sade of the cut, position the strote flainge portion of saddle around wood cush, on to got flainger. Stall dec, mail to wood cush. Place shingle over the steps. Apply next step, over-lapping the shingle by at less st 2; be sure flashing covers nailhead in shin-gle; place another shingle over this start. Continue this process on both sides of lowed curb to the lop of cush. Place top saddle around top of cut-sides of lowed curb to the lop of cush. Place top saddle around top of cut-nal deel singles. Shingle over top packets.



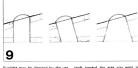

Sunsight may be directed by the use of light shafts for your particular light.

If the shafts for your particular light, the shafts for your particular light, and the shaft s





Measure and cut vertical 2 × 4 to go from ceiling opening frame up to roof curb framing. Remember to form corners for nating drywall or sheetock. Cut and nail interior walls of light shaft. Finish drywall or sheetrock by taping and painting or by using paneling and wood trim.



Once installed the Solar Industries, Inc. skylight should require no maintenance. Normal rainfall should keep the skylight clean. However, washing with soap and water will not harm the unit. No petroleum or ammonia based cleaners should

SKYVIEW® SKYLIGHTS ARE CONSTRUCTED TO MODULAR DIMENSIONS CONFORMING TO STANDARD ROOF FRAMING PRACTICES.

SELF FLASHING & CURB MOUNT SF SERIES & C-SERIES



LIFETIME GUARANTEE

All Skyview[®] Skylights are fully guaranteed against delects in materials and workmanship for like from date of purchase, provided that such products are installed in accordance with Solar Industries, Inc. recommendations. Liability of Solar Industries, Inc. shall not exceed the original purchase price of the defective unit exclusive of shipping expense and installation cods.

Do not use products that contain ammonia or petroleum to clean your Skyview* Skylight. Doing so will void the guarantee.

Industries, Inc. Installation Instructions What You Will Need Maggie **CURB MOUNT SELF FLASHING**

SOLAR INDUSTRIES INC.

This information is supplied in good faith but without recommendation as to its use. No guarantee of results of any use of the information is to be implied, since the conditions of use are beyond our control. Consult your local building codes.

DISTRIBUTED BY: